

MELJAC 

NORTH AMERICA

# WALL OUTLET INSTALLATION GUIDE

## TABLE OF CONTENTS


---

Back Box Installation Guide .....	03
Plate and Wiring Installation Guide .....	04
General Information .....	05
Plate Care & Maintenance .....	05
Warranty .....	05

# INSTALLATION INSTRUCTIONS || BACK BOX INSTALLATION

## BACK BOX INSTALLATION

- 1) Confirm that the appropriate back box is used for the corresponding Meljac plate size. See [Plate Size and Back Box Guide](#) for more information.
- 2) Back box must be mounted at a level position. Plate will not allow for leveling adjustment.
- 3) Back box should be installed flush with finished wall surface, and cannot be proud of the wall surface.
- 4) Back box can be mounted in either a horizontal or vertical orientation, depending upon the plate specification on your order. Be sure to check the order details prior to installing the back box.
- 5) Minimum recommended back box depth is 54 mm (2-1/8").

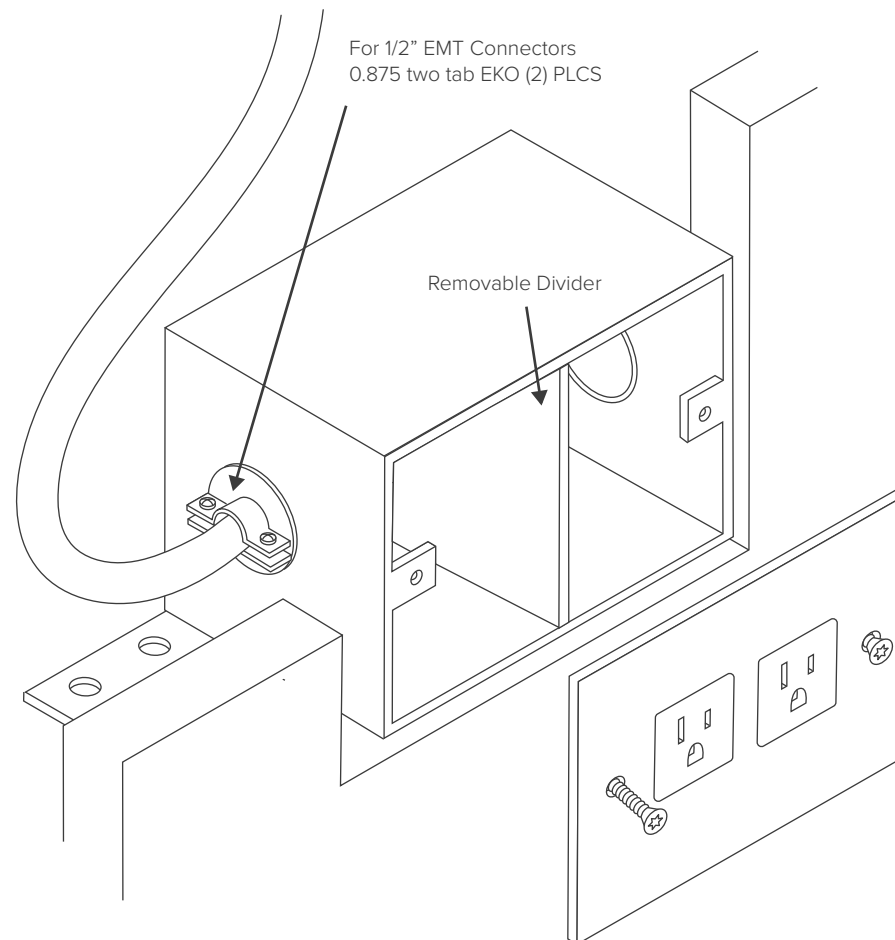

# INSTALLATION INSTRUCTIONS || PLATE AND WIRING INSTRUCTIONS

---

## PLATE AND WIRING INSTRUCTIONS

- 1) Plates must be installed on a flat and dry wall surface, after all finishing and painting is complete. Do not install on wet surface.
- 2) Connect power receptacle wires using appropriately sized wired connectors for power receptacles or alternate connectors for other component types.
- 3) Use an appropriate T10 torx screwdriver for plate installation. Do not use an electric screwdriver or drill.
- 4) For visible screw plates, fasten the single-plate assembly directly into the back box using the included screws. Take care to not excessively fasten the screws as this can damage the finish on the screws.
- 5) For hidden screw plates, orient the plate so that the notches on the bottom of vertical-orientation plate assemblies or side of horizontal plate assemblies align. Fasten the aluminum mounting plate to the back box using the provided screws. Gently press the finished cover plate into the mounting plate so that the plastic fasteners on the back of the cover plate snap into place.
- 6) For hidden screw plates, to remove the finished cover plate from the aluminium mounting plates, insert a flat head screwdriver ( 1/8" or smaller) into the notch between the two plates. Gently lift up to disengage the plastic fasteners. Move the screw driver head towards each of the fasteners to fully remove.

# GENERAL INFORMATION

---

Product should be installed by a certified electrician or other qualified person, in accordance with local electrical codes and regulations.

## CAUTION

To prevent shock or electrocution, always turn off electrical power at the main circuit panel before installation or maintenance.

## PLATE CARE & MAINTENANCE

If painting work is required after installation, unscrew plate and set aside in a protected manner while work is done to avoid any damage to plate or finish. Never put any tape or adhesives on Meljac plate.

To protect the integrity of the finish, no chemicals or cleaning solutions should ever be used on Meljac plates. Clean with dry dust rags or microfiber cloths only.

## WARRANTY

Lifetime Warranty. The device you have purchased is warranted under normal use against defects in workmanship and materials for as long as you own the device. If the device fails due to manufacturing defect during normal use, contact Meljac North America at (323) 421-7426, [info@meljac-na.com](mailto:info@meljac-na.com), or 2566 1/2 Lake View Ave, Los Angeles, CA 90039.

ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. YOUR SOLE AND EXCLUSIVE REMEDY AGAINST MELJAC NORTH AMERICA UNDER ANY WARRANTY SHALL BE THE EQUIVALENT REPLACEMENT OF THE DEVICE. IN NO EVENT SHALL ANY WARRANTY APPLY TO ANY DEFECT ARISING OUT OF ANY ALTERATION OF THE DEVICE, IMPROPER INSTALLATION, MISUSE ABNORMAL USE OR NEGLIGENCE. IN NO EVENT SHALL MELJAC NORTH AMERICA LLC BE LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long implied warranties last and do not allow exclusion or limitation of incidental or consequential damages. Some of the above limitations or exclusions may not apply to every purchaser.

## CONTACT

---

[info@meljac-na.com](mailto:info@meljac-na.com)

323-421-7426

[meljac-na.com](http://meljac-na.com)