

MELJAC 

NORTH AMERICA

# FLOOR OUTLET INSTALLATION GUIDE

## TABLE OF CONTENTS

---


Back Box Plate and Wiring Instructions _____	03
General Information _____	04
Plate Care & Maintenance _____	04
Warranty _____	04

# INSTALLATION INSTRUCTIONS

## BACK BOX, PLATE AND WIRING INSTALLATION

- 1) Confirm that the appropriate back box is used for the corresponding Meljac floor outlet. See [Plate Size and Back Box Guide](#) for more information.
- 2) Meljac floor outlet back boxes are delivered with a plastic installation template that corresponds with the finished trim plate and outlet assembly you will eventually receive. This installation template is the exact dimension and depth of the finish trim plate and fastens into the back box using the exact screw interaxis and orientation.
- 3) Using the installation template as your guide, set the back box at the depth that places the template flush with the finished floor surface. The trim plate assembly will later be installed flush with the finished floor surface. Drawing I.
- 4) To prevent moisture from entering between the floor cutout and the plate installation, a sealant can be added around the border of the installation template.
- 5) Using 6/32 machine screws, fasten the installation template into the back box. All flooring and finishing should be done around the plastic installation template. Do not install the trim plate until after floor installation and finishing is complete.
- 6) The installation template can also be used to determine the trim plate cutout required for wood or stone floors; additionally it can serve as the mold around which concrete can be poured. Drawing II.
- 7) Once flooring is installed and finished, remove the installation template and connect the pre-wired pigtails of the Meljac power receptacles (supplied with the trim plate assembly) to the main electrical line using appropriately sized wire connectors. 15A Meljac power receptacles have 14 AWG pre-wire and 20A power receptacles have 12 AWG pre-wire. Drawing III.
- 8) Use an appropriate T10 torx screwdriver for plate installation. Do not use an electric screwdriver or drill.

Note: drawing example shows installation of single round floor outlet (Part # SOL-100D-1PC). The same instructions apply to single square floor outlet (MNA part # SOL-10010014-1PC) and double floor outlet (MNA part # SOL-18010014-2PC).

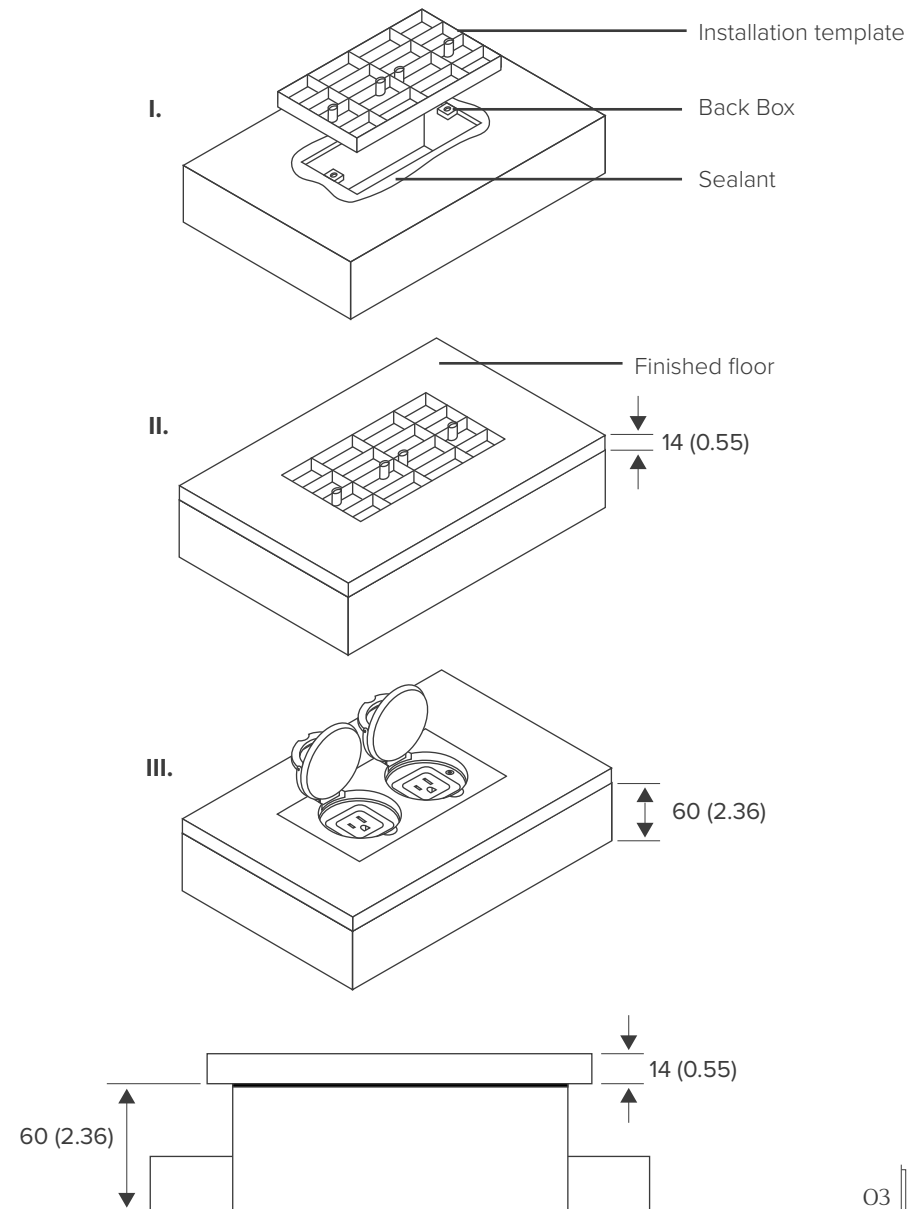

# GENERAL INFORMATION

---

Product should be installed by a certified electrician or other qualified person, in accordance with local electrical codes and regulations.

## CAUTION

To prevent shock or electrocution, always turn off electrical power at the main circuit panel before installation or maintenance.

## PLATE CARE & MAINTENANCE

If painting or floor work is required after installation, unscrew plate and set aside in a protected manner while work is done to avoid any damage to plate or finish. Never put any tape or adhesives on Meljac plate.

To protect the integrity of the finish, no chemicals or cleaning solutions should ever be used on Meljac plates. Clean with dry dust rags or microfiber cloths only.

## WARRANTY

Lifetime Warranty. The device you have purchased is warranted under normal use against defects in workmanship and materials for as long as you own the device. If the device fails due to manufacturing defect during normal use, contact Meljac North America at (323) 421-7426, info@meljac-na.com, or 2566 1/2 Lake View Ave, Los Angeles, CA 90039.

ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. YOUR SOLE AND EXCLUSIVE REMEDY AGAINST MELJAC NORTH AMERICA UNDER ANY WARRANTY SHALL BE THE EQUIVALENT REPLACEMENT OF THE DEVICE. IN NO EVENT SHALL ANY WARRANTY APPLY TO ANY DEFECT ARISING OUT OF ANY ALTERATION OF THE DEVICE, IMPROPER INSTALLATION, MISUSE ABNORMAL USE OR NEGLIGENCE. IN NO EVENT SHALL MELJAC NORTH AMERICA LLC BE LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long implied warranties last and do not allow exclusion or limitation of incidental or consequential damages. Some of the above limitations or exclusions may not apply to every purchaser.

## CONTACT

---

[info@meljac-na.com](mailto:info@meljac-na.com)

323-421-7426

[meljac-na.com](http://meljac-na.com)